



Calibration

Manual Calibration:

1. Select VOLUME/MINUTE mode on left switch.
2. Hold center switch up to display Flow Cal value.
3. Press right INCREASE/DECREASE switch up or down to set calibration value.
4. Release switches.

Semi-automatic Calibration:

1. Select TOTAL VOLUME mode on left switch.
2. Press and hold vright RESET switch until value is 0 then release switch.
3. Accurately fill a calibrated container.
4. Hold center switch up to display Flow Cal value.
5. Press right INCREASE/DECREASE switch up or down to match measured volume in container.
6. Release switches.

Display Messages

bAd CAL

- memory error
- recalibrate unit

OFL

- volume counter is full
- hold RESET to clear

LP

- low power
- normal when turning unit off

