



MICRO-TRAK
SYSTEMS, INC.

PWM Valve Controller Installation Instructions

WARNING: Do NOT connect the valve leads (orange and blue wires) to the battery or power supply. Non-warranty damage will result if the valve leads are connected to the battery or power supply.

