



MICRO-TRAK
SYSTEMS, INC.

Application Control
Specialists
800.328.9613
www.micro-trak.com

Micro-Trak 10 Amp Manual Controller

LED STATUS INDICATOR CODES		
Light on steady		Unit is turned on and operating normally
1 Flash/pause		Open circuit detected. Check motor connections for open.
2 Flashes/pause		Output short circuit detected. Check motor wiring.
3 Flashes/pause		Over-current condition. Check total load.

NOTE: Cycle power with the ON/OFF switch to clear a fault code

