



# MICRO-TRAK<sup>®</sup> SYSTEMS, INC.

www.micro-trak.com 800.328.9613

## Micro-Trak 10 Amp Manual Controller

### LED STATUS INDICATOR CODES

Light on steady		Unit is turned on and operating normally
1 Flash/pause		Open circuit detected. Check motor connections for open.
2 Flashes/pause		Output short circuit detected. Check motor wiring.
3 Flashes/pause		Over-current condition. Check total load.

NOTE: Cycle power with the ON/OFF switch to clear a fault code

### Extended Warranty Option

Register this product **ONLINE** at [www.micro-trak.com](http://www.micro-trak.com) to extend your warranty for up to three years\* at no additional charge.

Registration information is for internal use only.  
\* Some limitations apply. See warranty statement for details.

