



MICRO-TRAK
SYSTEMS, INC.

Micro-Trak 10 Amp Manual Controller w/ addl. power output Installation Instructions

IMPORTANT!
Do **not** connect the motor leads to the battery or power supply. Resulting damage to controller will **not** be covered under warranty.

OPTIONAL 2-PIN W/P EXTENSION CABLES		
P/N 11560	5'	CABLE
P/N 11561	10'	CABLE
P/N 11671	15'	CABLE
P/N 11672	20'	CABLE

FUNCTIONS OF RED LAMPS

1. LED on front is ON steadily if switch on the front is on and controller is operating normally.
2. LED on top is ON if the switch on top is in the ON position.
3. If there is a problem with the wiring or motor, the light on the front will flash to indicate the system status.
 - If the console shuts down due to thermal overload due to a shorted motor or motor leads, the lamp will flash twice, pause, flash twice, pause, etc.
 - If other system problems occur requiring a call to Micro-Trak® Service, please count the number of flashes to help with troubleshooting.

NOTE: Micro-Trak Systems, Inc. can be reached at 800-328-9613.

