



MICRO-TRAK
SYSTEMS, INC.

www.micro-trak.com 800.328.9613

25 Amp Manual Controller Installation Instructions

LED STATUS INDICATOR CODES


Light on steady		Unit is turned on and operating normally
Steady Flashing		Unit in HOLD. Check Run/Hold jumper or remote switch for correct operation.
1 Flash/pause		Open circuit detected. Check motor connections for open.
2 Flashes/pause		Output short circuit detected. Check motor wiring.
3 Flashes/pause		Over-current condition. Check total load.

NOTE: Cycle power with the ON/OFF switch to clear a fault code

Extended Warranty Option

Register this product **ONLINE** at www.micro-trak.com to extend your warranty for up to three years* at no additional charge.

Registration information is for internal use only.
* Some limitations apply. See warranty statement for details.

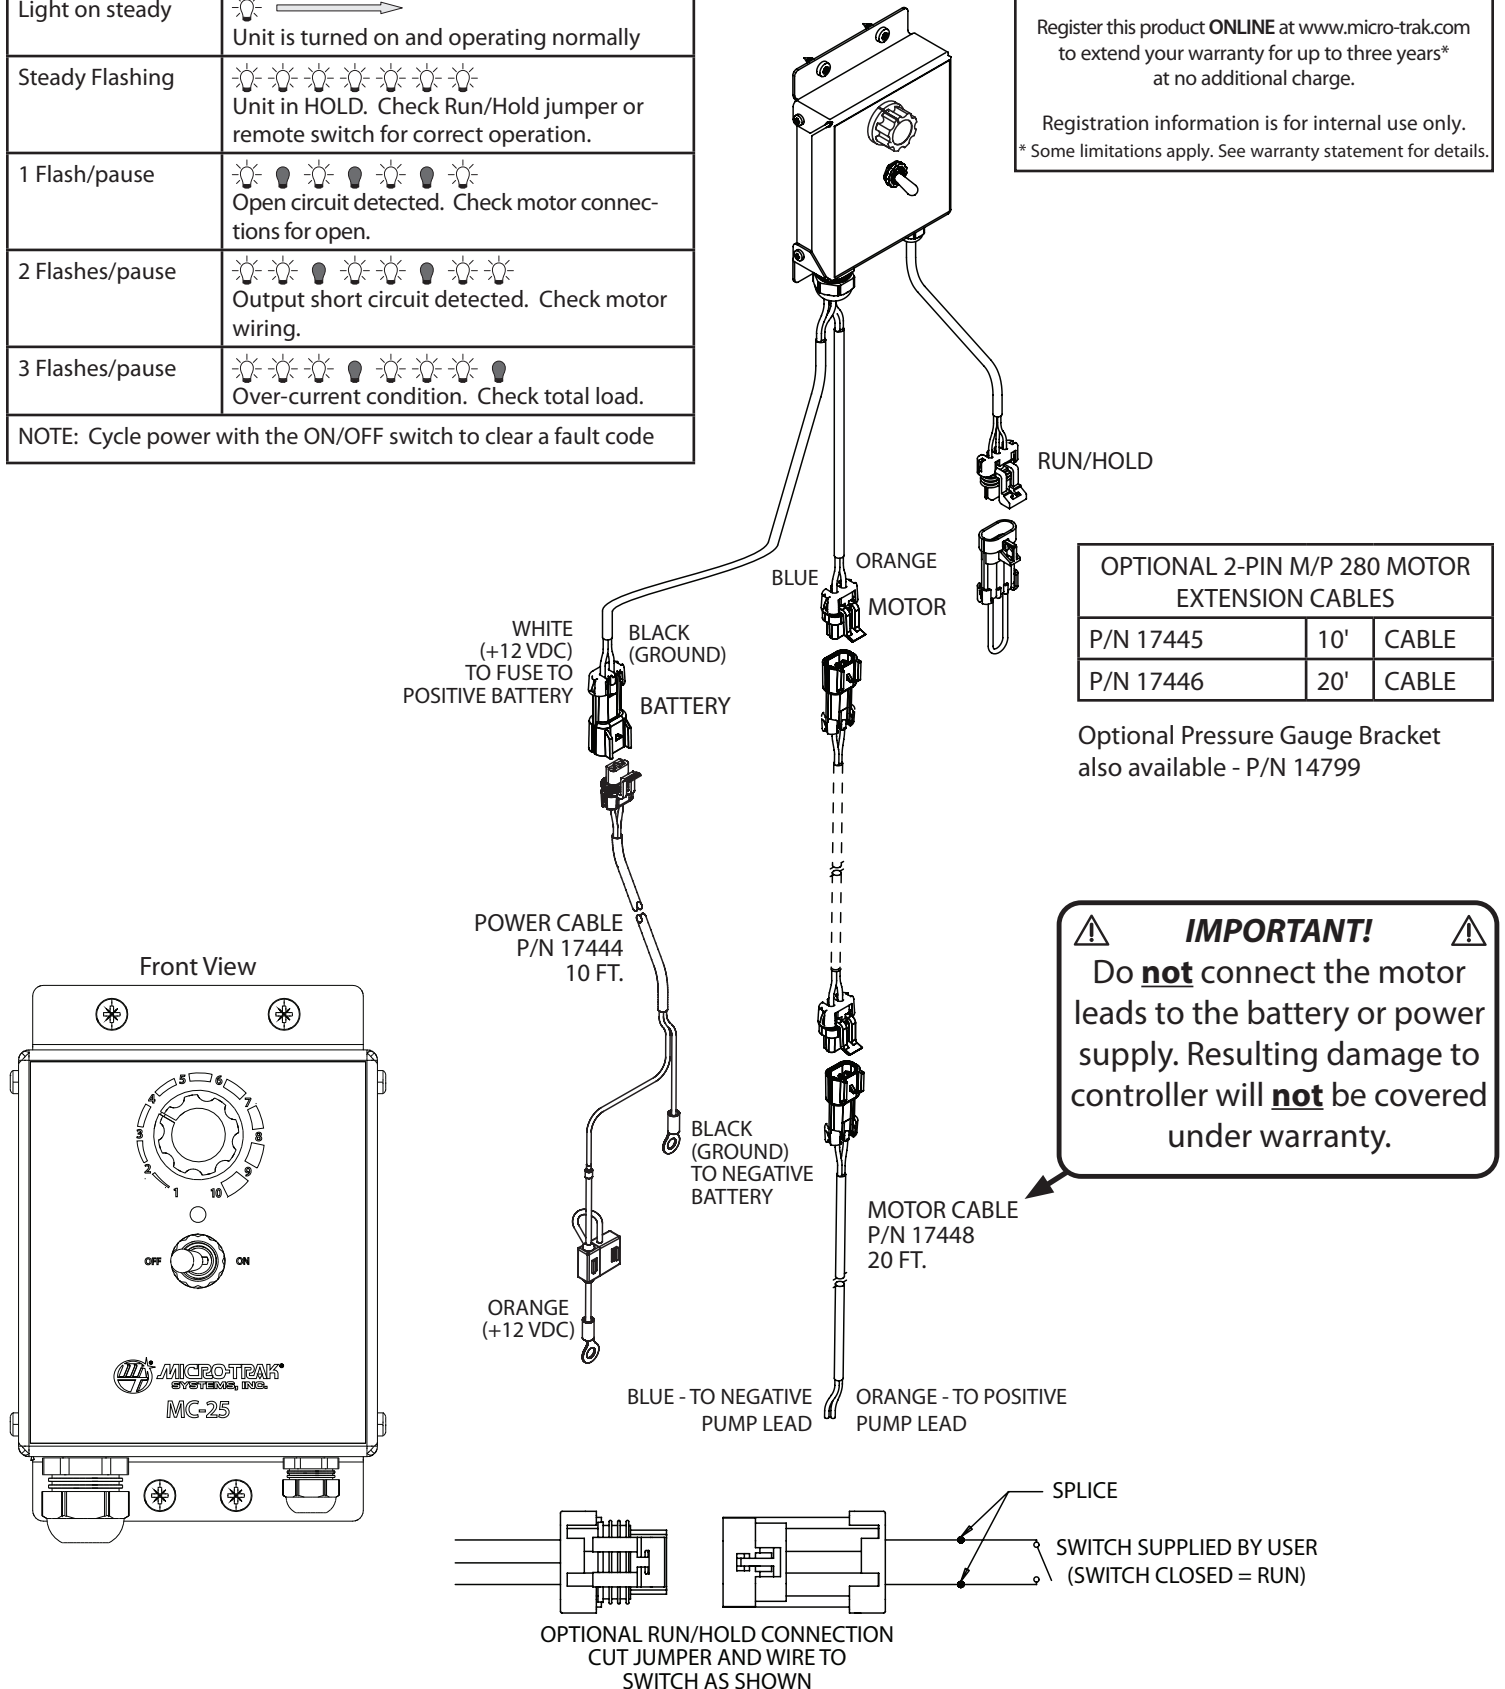

OPTIONAL 2-PIN M/P 280 MOTOR EXTENSION CABLES		
P/N 17445	10'	CABLE
P/N 17446	20'	CABLE

Optional Pressure Gauge Bracket also available - P/N 14799

IMPORTANT!
Do **not** connect the motor leads to the battery or power supply. Resulting damage to controller will **not** be covered under warranty.

