




**MICRO-TRAK**  
SYSTEMS, INC.

## 10 Amp Controller PCB Installation

### FUNCTIONS OF RED LAMP

1. On steadily if switch is on and controller is operating normally.
2. If there is a problem with the wiring or motor, the light will flash to indicate the system status.
  - For instance, if the motor leads are disconnected the light will flash once, pause, flash once, pause, etc.
  - If the console shuts down due to thermal overload due to a shorted motor or motor leads, the lamp will flash twice, pause, flash twice, pause, etc.
  - If other system problems occur requiring a call to Micro-Trak Service, please count the number of flashes to help with troubleshooting.

**NOTE:** Micro-Trak Systems, Inc. can be reached at 800-328-9613.

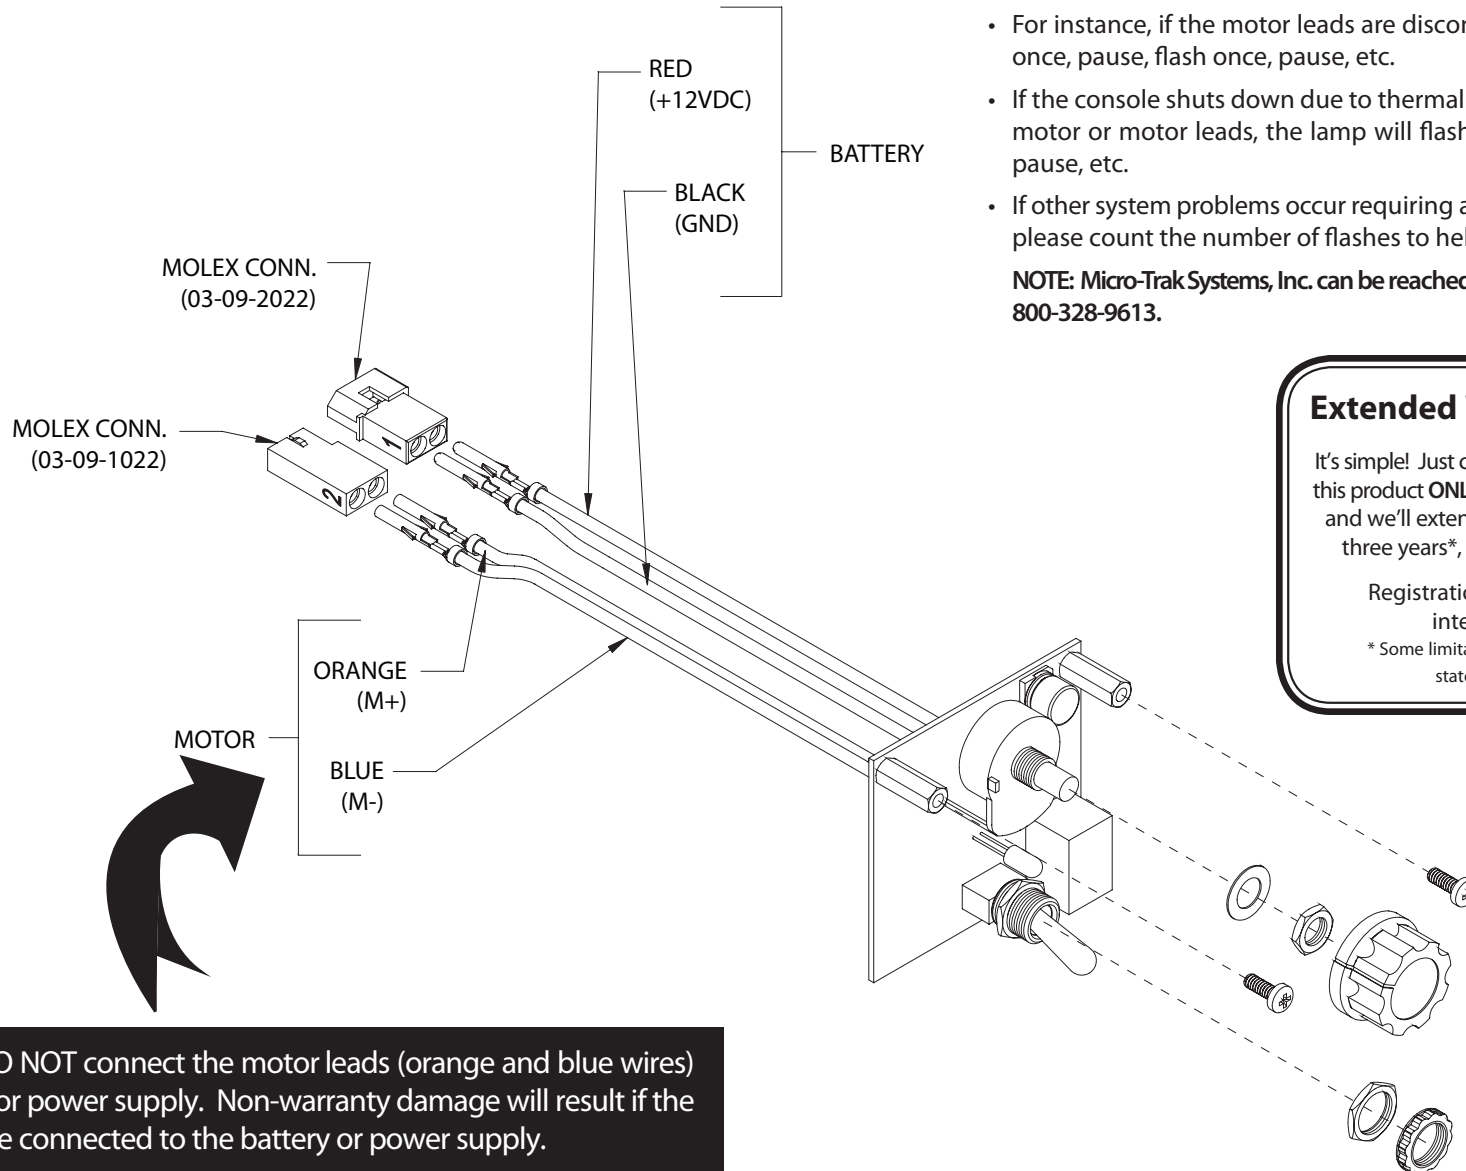

**WARNING:** DO NOT connect the motor leads (orange and blue wires) to the battery or power supply. Non-warranty damage will result if the motor leads are connected to the battery or power supply.

### Extended Warranty Option

It's simple! Just complete the registration for this product **ONLINE** at [www.micro-trak.com](http://www.micro-trak.com) and we'll extend your warranty for up to three years\*, at no additional charge.

Registration information is for internal use only.

\* Some limitations apply. See warranty statement for details.