


Chem fill dust cap installation

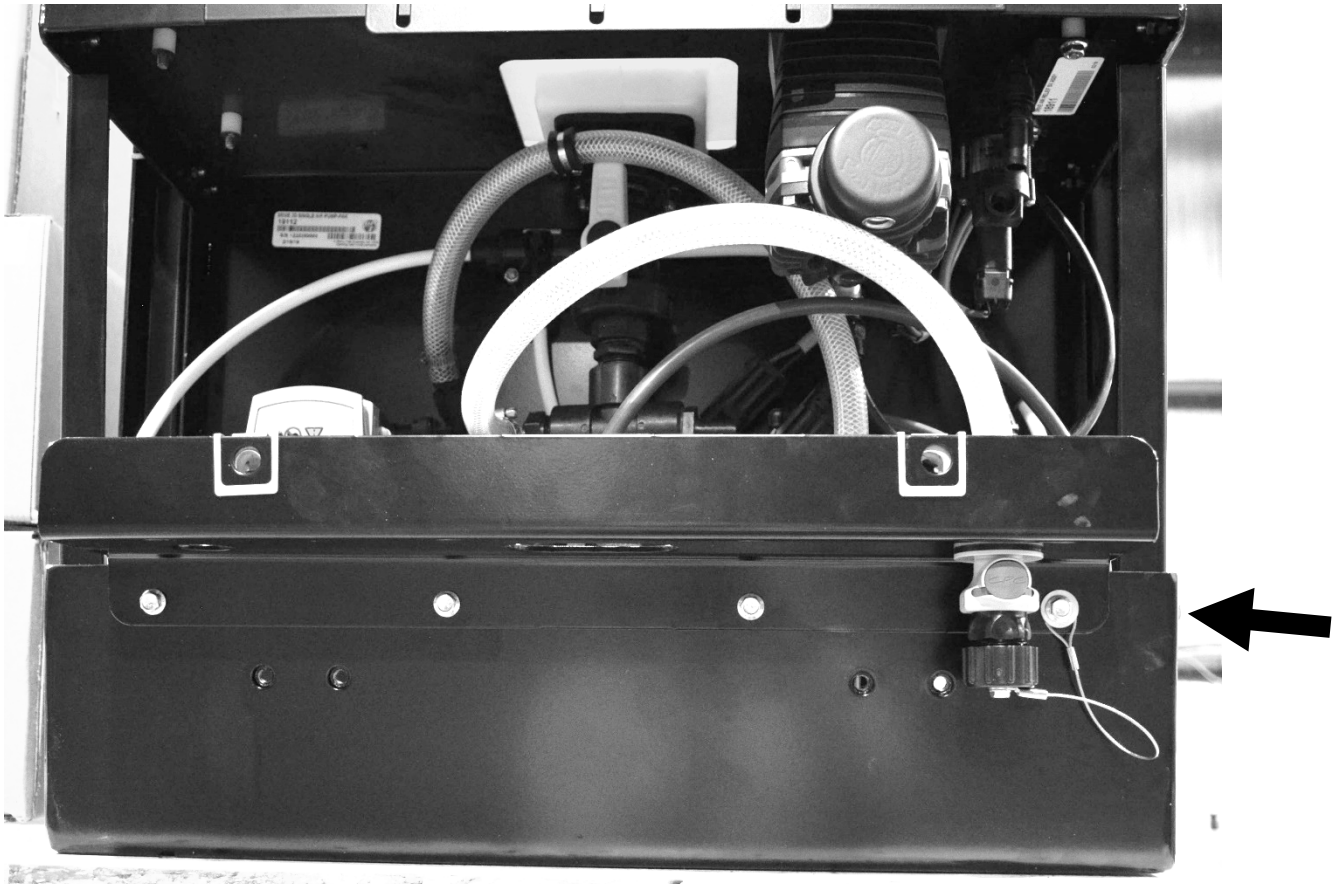

Remove the PumpPak cover and existing bracket bolt adjacent to quick-fill coupler. Replace with dust cap lanyard, flat washer, and $\frac{1}{4}$ " – 20 x $\frac{3}{4}$ " bolt. The dust cover snaps on the bottom of the chemical fill quick-coupler to keep dust and dirt from accumulating on the fitting.